


# Alcatel

## S250 COMBO S250 COMBO DUO

www.alcatel-home.com



GUÍA DEL USUARIO  
FAVOR DE LEER ESTE MANUAL ANTES DE UTILIZAR SU  
TELÉFONO  
USER'S GUIDE  
BEFORE TO USE YOUR PHONE, PLEASE READ ALL THIS  
USER'S GUIDE

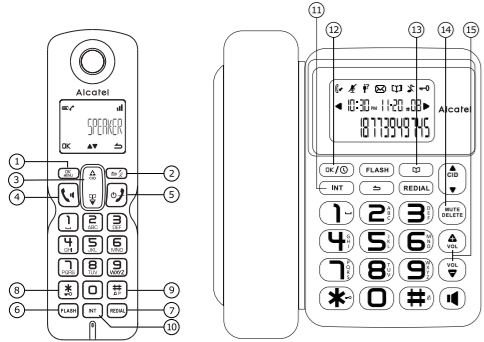

### ENGLISH

#### BEFORE 1st USE

##### Connecting your phone:

- Connect plugs in corresponding sockets in the base station. Plug the telephone line into telephone socket and insert power plug in an electrical outlet.
- Insert batteries in Handset.

Before you start to use your telephone, charge batteries continuously for 15 hours.

**▲** only use plug adapter supplied with the unit and rechargeable batteries with your phone.

##### Handset / Base Station Keys

- OK/Menu key**
- Back key/Clear key/Mute key**  
(Long press to toggle between handset name and date/time)
- Navigation key ( CID , phonebook, volume )**
- Talk key/Activate handsfree**
- Hang-up/Exit key**
- Flash key** - To access to operator services\*
- Redial key**
- Star key** - To lock / unlock keypad; toggle between the external and internal calls
- Hash key**
- Call transfer/Intercom key (cordless phone)**
- Paging function/Intercom key (corded phone)**
- OK/Clock set key**
- Phonebook key**
- Delete/Mute key**
- Ringer/Speaker/Handset receiver volume control**

##### Display icons

Fast blink indicates battery low.

Indicates that an external call is connected or held. Icon blinks when receiving an incoming call.

Indicates you have a new voice mail message\*.

Indicates you have new missed calls\*, or the call log is being viewed.

Displays when the phonebook is accessed.

Displays when the alarm clock is activated.

Displays when handsfree is activated.

Displays when ringer volume is turned off.

Indicates that the handset is registered and within range of the base station.

Icon blinks when the handset is out of range or is searching for a base.

OK Displays when in menu mode to confirm your selection.

**▲▼** Indicates that more options are available. Use the UP / DOWN keys to scroll up / down.

Displays when in menu mode. Select BACK to return to the previous menu level.

\*Subject to subscription and availability of the service from the land line operator.

#### Your Telephone Operations

##### Switching on / off

- Press and hold the key.

Notes: When the cordless phone is OFF, it cannot be used for making calls including emergency calls. There will be no ringing during an incoming call. To answer a call, you will need to switch it back on. It may take some time for the handset to re-establish a radio link with the base unit.

##### To lock / unlock the keypad

- Press and hold the key.

Note: Incoming calls can still be answered even if the keypad was locked.

##### Change the display language

- **MENU** / **▲** or **▼** to select **PERSONAL SET** / **OK** / **▲** or **▼** to select **LANGUAGE** / **OK** / **▲** or **▼** to your desired language / **OK** / confirmation beep.

Note: Once the display language is set, the option menus on the handset will switch to display in the selected language immediately.

##### Set time and date

Note: If you subscribe to the Caller Display service, the time and date will be set automatically when you receive a call, but you may still need to set the correct year.

- **MENU** / **▲** or **▼** to select **CLOCK & ALARM** / **OK** / **OK** to select **DATE** / **TIME** to display the last stored date /OK enter the current (YY - MM - DD) / **OK** / enter the time (HH-MM) / **OK** .  
( From base : press and hold **OK** / / Enter HH/MM and DD/MM / short press **OK** to confirm )

##### Change your handset's name

- **MENU** / **▲** or **▼** to select **PERSONAL SET** / **OK** / **▲** or **▼** to select **HANDSET NAME** / **OK** to display the current handset name / to delete the characters / enter the new name (maximum 10 characters) / **OK** / confirmation beep.

##### Make and answer calls

###### Make a call

- either before or after dialing your number.
  - From redial list : **▲** / **▲** or **▼** / or .
  - From call log list\*: **cid** / **▲** or **▼** / or .
- Note: You need to subscribe to Caller Line Identification service to be able to see the caller's number or name in the call log.
- From phonebook: / **▲** or **▼** / or .
  - From direct memories : long press on handset KEY 1 or KEY 2 in idle mode / .

##### Answer and end a call

- / .
- IMPORTANT NOTE: You can simply place the handset back on its base station charger pod to end the call.

##### Use handsfree

- To activate / deactivate handsfree : or .

##### Adjust the earpiece volume

During a call, press **▲** or **▼** to select from VOLUME 1 to VOLUME 5.  
( From base: press to adjust the volume )

##### Mute / unmute microphone

- or **MUTE** **DELETE** to turn on / off the microphone.

##### Paging

- Press **INT** located at the corded base. All the registered handsets start to ring.
- Once retrieved, press the **INT** again to end the paging.

##### Call waiting

If you having subscribed to Call Waiting service, the earpiece will emit a beep tone to inform you that there is a second incoming call. The number or name of the second caller will also be displayed on your phone if you have subscribed to Caller Line Identification service (CLI). Please contact your network provider for more information on this service.

#### Phonebook settings: 50 entries in extra-handset and 30 entries in base.

- **MENU** / **▲** or **▼** to select **PHONEBOOK** / **OK** / **OK** to enter **NEW ENTRY** / enter the name of contact / **OK** / enter the number of contact / **OK** / confirmation beep ( to delete characters).  
( From base : press & hold / enter the number / **OK** )

##### Access phonebook

- or **MENU** to select **PHONEBOOK** / **OK** / **▲** or **▼** to select **LIST** .

Note: Instead of pressing **▲** or **▼** to browse the phonebook entries, you can press the numeric key corresponding to the first letter of the entry you wish to locate.

( From base : / **▲** & **▼** )

##### Modify a phonebook entry

- **MENU** / **▲** or **▼** to select **PHONEBOOK** / **OK** / **▲** or **▼** to select **EDIT ENTRY** / **OK** / **▲** or **▼** to select an entry to edit / **OK** / current name is displayed / edit the name / **OK** / edit the number / **OK** / confirmation beep.  
( From base : press / **▲** or **▼** to select the number / press & hold the / press to delete the digits / enter the new number / **OK** )

##### Delete a phonebook entry

- **MENU** / **▲** or **▼** to select **PHONEBOOK** / **OK** / **▲** or **▼** to select **DELETE** / **OK** / **▲** or **▼** to select entry to delete / **OK** / **OK** / confirmation beep.  
( From base : press / **▲** or **▼** to select the number / press / **OK** )

##### Delete all entries from the phonebook list

- **MENU** / **▲** or **▼** to select **PHONEBOOK** / **OK** / **▲** or **▼** to select **DELETE ALL** / **OK** / **OK** / confirmation beep.  
( From base : press / press and hold / **OK** )

##### Add / edit handset direct access memory

- **MENU** / **▲** or **▼** to select **PHONEBOOK** / **OK** / **▲** or **▼** to select **DIRECT MEM.** / **OK** / **▲** or **▼** to select **KEY 1** or **KEY 2** / **OK** / stored name displayed, or **NO NUMBER** displayed if it is empty / **MENU** to enter direct memory menu / **▲** or **▼** to select **EDIT NUMBER** / **OK** / currently stored name displayed (or **ENTER NAME** if there is no number stored) / edit or enter the name / **OK** / ..... / **OK** / confirmation beep.

##### Delete handset direct access memory

- **MENU** / **▲** or **▼** to select **PHONEBOOK** / **OK** / **▲** or **▼** to select **DIRECT MEM.** / **OK** / **▲** or **▼** to select **KEY 1** or **KEY 2** / **OK** / stored name displayed (or **NO NUMBER** if it is empty) / **MENU** to enter direct memory menu / **▲** or **▼** to select **DELETE** / **OK** / **OK** / confirmation beep.

##### Using the redial list

The redial list stores the last 5 numbers dialed.

##### Access redial list

- **▲** / **▲** or **▼** to browse the redial list / to view details.

##### Save a redial number into the phonebook

- **▲** / **▲** or **▼** to select an entry / **MENU** to display **SAVE NUMBER** / **OK** to display **ENTER NAME** / enter the name of contact (maximum 12 characters) / **OK** / return the display to redial list.  
( From base : **▲** / **▲** or **▼** / press and hold / **OK** )

##### Using the call log

###### Access call log

- **cid** / **▲** or **▼** .

###### Save call list entry into the phonebook

- **cid** / **▲** or **▼** to select an entry / **MENU** / **▲** or **▼** to select **SAVE NUMBER** / **OK** to select and enter the name of contact (maximum 12 characters) / **OK** .  
( From base : **cid** / **▲** or **▼** / press and hold / **OK** )

##### Delete a Call Log entry

- **cid** / **▲** or **▼** / **MENU** / **▲** or **▼** to select **DELETE** / **OK** / **OK** / confirmation beep.  
( From base : press **cid** / **▲** or **▼** to select the number / press / **OK** )

##### Delete all entries in the Call Log

- **cid** / **MENU** / **▲** or **▼** to select **DELETE ALL** / **OK** / **OK** / confirmation beep.  
( From base : press **cid** / press and hold / **OK** )

##### Using the intercom

###### Intercom another handset

- Press **INT**  
( Press the handset number or **\*** to ring all handsets )

#### Transfer an external call to another handset During the call:

- Press **INT**  
( Press the handset number or **\*** to ring all handsets )
  - on the called handset to answer the internal call / on the first handset transfer the external call to the called handset / external call transferred.  
( From Base : press or pickup the handset to answer the internal call )
- Note: If there is no answer from the called handset, press **INT** key to resume the external call.

##### Answer an external call during intercom

- / answer the external call and end the intercom.  
Note: To put the internal call on hold and answer the incoming external call, press **INT** key.  
( From Base : end the intercom by pressing or return the handset to cradle )

##### Switch between an internal and external call

- During the call, press **INT** .

##### Establish a three-party conference call

- During call, **INT** / enter handset number / on the called handset to answer / press **OK** on the first handset.  
( From Base : long press **INT** to establish the conference )  
**CONFERENCE** will be displayed on the handset screen once the conference call is established.

##### Set handset ring volume

There are 5 ringer volume options (OFF, LEVEL 1, LEVEL 2, LEVEL 3, LEVEL 4 and LEVEL 5). The default level is LEVEL 3.

- **MENU** / **▲** or **▼** to select **PERSONAL SET** / **OK** / **▲** or **▼** to select **HANDSET TONE** / **OK** to select **RING VOLUME** / **OK** / **▲** or **▼** to the desired volume level / **OK** / confirmation beep.

##### Set handset ring melody: 10 ring melodies

- **MENU** / **▲** or **▼** to select **PERSONAL SET** / **OK** / **▲** or **▼** to select **HANDSET TONE** / **OK** / **▲** or **▼** to select **RING TONES** / **OK** / **▲** or **▼** to the desired melody / **OK** / confirmation beep.

##### Activate / deactivate handset key tone

- **MENU** / **▲** or **▼** to select **PERSONAL SET** / **OK** / **▲** or **▼** to select **HANDSET TONE** / **OK** / **▲** or **▼** to select **KEY BEEP** / **OK** / **▲** or **▼** to select **ON** or **OFF** / **OK** / confirmation beep.

##### Activate / deactivate auto hang-up

- **MENU** / **▲** or **▼** to select **PERSONAL SET** / **OK** / **▲** or **▼** to select **AUTO HANG-UP** / **OK** / **▲** or **▼** to select **ON** or **OFF** / **OK** / confirmation beep.

##### Set time format (Handset only)

- **MENU** / **▲** or **▼** to select **CLOCK&ALARM** / **OK** / **▲** or **▼** to select **SET FORMAT** / **OK** / **OK** to enter **TIME FORMAT** / current setting displayed / **▲** or **▼** to select **12 HOURS** or **24 HOURS** / **OK** / confirmation beep.

##### Set date format (Handset only)

- **MENU** / **▲** or **▼** to select **CLOCK&ALARM** / **OK** / **▲** or **▼** to select **SET FORMAT** / **OK** / **▲** or **▼** to enter **DATE FORMAT** / **OK** / current setting display / **▲** or **▼** to select **DD/MM** or **MM/DD** / **OK** / confirmation beep.

##### Set alarm (Handset only)

- **MENU** / **▲** or **▼** to select **CLOCK&ALARM** / **OK** / **▲** or **▼** to select **ALARM** / **OK** / **▲** or **▼** to enter **OFF**, **ON ONCE** or **ON DAILY** / **OK** .
- if select **ON ONCE** or **ON DAILY**, enter time (HH-MM) for alarm / **▲** or **▼** to select **AM** or **PM** if in 12 HOURS format / **OK** / confirmation beep.

##### Set alarm tone (Handset only)

- **MENU** / **▲** or **▼** to select **CLOCK&ALARM** / **OK** / **▲** or **▼** to select **ALARM TONE** / **OK** / **▲** or **▼** to enter **MELODY 1**, **MELODY 2** or **MELODY 3** / **OK** / confirmation beep.

##### Advanced use of your telephone

###### Change Master PIN

The Master PIN is used for registration / unregistration of handsets. The default Master PIN number is 0000.

Note: If you forget your PIN code, you can reset it to its

default 0000 using a handset Reset.

- **MENU** / **▲** or **▼** to select **ADVANCED SET** / **OK** / **▲** or **▼** to select **CHANGE PIN** / **OK** / enter current master pin when prompted / **OK** / enter new / **OK** / confirmation beep.

##### Register your handset

**IMPORTANT:** Handset registration is only necessary when you buy extra handsets or if a handset has become faulty. Up to 4 handsets can be registered to one base station. The Master PIN is required before you can register or unregister handsets.

By default, the Master PIN is 0000.

- On the base station, press and hold the **INT** key for 5 seconds
- On the handset, press **MENU** / **▲** or **▼** to select **ADVANCE SET** / **OK** / **▲** or **▼** to select **REGISTRATION** / **OK** / enter Master PIN when prompted / **OK** / **WAITING** displayed / confirmation beep.

##### Unregister your handset

- **MENU** / **▲** or **▼** to select **ADVANCE SET** / **OK** / **▲** or **▼** to select **UNREGISTER** / **OK** / enter Master PIN when prompted / **OK** / **▲** or **▼** to select the handset number to unregister / **OK** / confirmation beep.

##### Change recall time

- **MENU** / **▲** or **▼** to select **ADVANCE SET** / **OK** / **▲** or **▼** to select **RECALL TIME** / **OK** / **▲** or **▼** to select **SHORT**, **MEDIUM** or **LONG** / **OK** / confirmation beep.

#### Change the dial mode (dual mode dialing version only)

You should normally leave the dialling mode at its default setting of TONE (also called MF or DTMF).

However, you can change to PULSE if necessary.

Note: If PULSE dialling is set, you can press **\* \* .** to switch to TONE dialling for the rest of that call.

- **MENU** / **▲** or **▼** to select **ADVANCED SET** / **OK** / **▲** or **▼** to select **DIAL MODE** / **OK** / **▲** or **▼** to select **TONE** or **PULSE** / **OK** / confirmation beep.

##### Reset unit

- **MENU** / **▲** or **▼** to select **ADVANCE SET** / **OK** / **▲** or **▼** to select **RESET** / **OK** / **OK** / confirmation beep.

##### Troubleshooting

If you have difficulty with your phone, please try the suggestions listed below.

As a general rule, if a problem occurs, remove the batteries from all the handsets in your installation for about 1 minute, then disconnect and reconnect the power supply to the base and reinstall the handset batteries.


<b>Always</b> check first that	You have followed all the steps listed in the user manual to install and set up your telephone. All connectors are firmly inserted in their sockets. Mains power to the base unit is switched on at the socket. The handset's batteries are correctly and securely installed and are not run down.
<b>Everyday use</b> "I cannot make or answer calls"	If the handset's display is blank, it may have been switched off. Press and hold the HANG-UP/EXIT key to switch it back on. Check that the base unit's mains power adapter is plugged in and power is switched on. The base unit needs mains power for normal operation of the phone - not just for charging the batteries. Make sure you are using the telephone line cable supplied with your telephone. Other telephone line cables might not work. Move the handset closer to the base unit. Check the battery level symbol on the display. If it is low, replace the handset on the base unit or charger pod to recharge the batteries. Switch off power at the mains socket, wait for a short time and then switch back on. This may solve the problem.
"I cannot make a call"	If the handset display shows KEYS LOCKED, press and hold the  button to unlock it before you make a call. Only one handset (or the base unit) can be connected to the outside line at a time. If another handset is already using the line, you need to wait until it has finished its call.
"When I press on the keys, nothing happens"	Make sure the batteries are fitted in your handset. If the Battery Level symbol on the display shows 'low', put your handset back on the cradle to charge.
"When I key in a number, it appears on the display, but I cannot make an outside call"	Try a different position for the base unit – somewhere higher if possible, or further from other electrical equipment. Try moving the handset closer to the base unit.

### Lea estas indicaciones antes de usar su teléfono Conexión del teléfono:

- Conecte los enchufes en las tomas correspondientes en la estación base. Conecte el cable de la línea telefónica en la toma telefónica e inserte el adaptador de alimentación a una toma de corriente.
- Coloque las baterías AAA en el auricular.

Antes de empezar a usar el teléfono, asegúrese de que las baterías hayan sido cargadas totalmente durante 15 horas.

Use siempre el adaptador de alimentación y las baterías que se adjuntan en la caja.

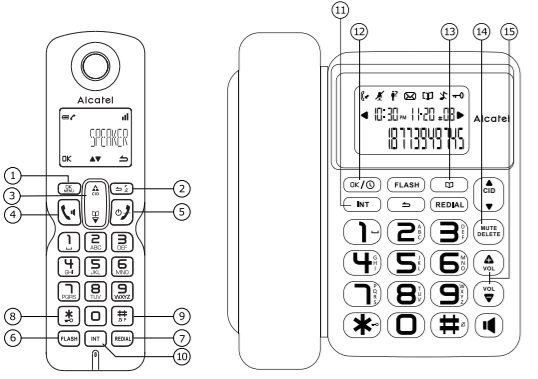

#### Vista general del auricular y de la estación base

- Tecla de OK / Tecla de menú**
- Tecla Atrás / Borrar / Tecla de silencio (Mute)** (Pulse y mantenga pulsado para alternar entre el nombre del auricular y la fecha/hora)
- Tecla de Navegación (Identificador de llamadas, agenda, volumen)**
- Tecla Hablar/ Activar modo manos libres**
- Tecla Colgar / Salir**
- Tecla Flash** - Accede a los servicios del operador\*
- Tecla de Rellamada**
- Tecla deAsterisco (\*)** - Bloquear / desbloquear el teclado; cambiar entre llamadas internas y externas
- Tecla Almohadilla (#)**
- Tecla de Transferencia de Llamadas / Intercomunicador (en auricular inalámbrico)**
- Función paging (búsqueda de auricular) / Intercomunicador (en base alámbrica)**
- Tecla OK/Reloj (establecer la hora)**
- Tecla Agenda**
- Tecla Borrar/Tecla de silencio (Mute)**
- Tecla Timbre/Activar modo manos libres/Control de Vol del auricular**

#### Íconos y símbolos de la pantalla

El parpadeo rápido del testigo indica que la batería tiene poca carga.

Indica que está conectado o en espera de una llamada externa.

El icono parpadea al recibir una llamada entrante.

Indica que ha recibido un nuevo mensaje de correo de voz.\*

Indica que tiene nuevas llamadas perdidas o que se está revisando el registro de llamadas.\*

Aparece cuando se accede a la agenda.

Aparece cuando se activa el despertador.

Aparece cuando se activa el manos libres.

Aparece cuando se apaga el volumen del sonido.

Indica que el auricular está registrado y dentro de la cobertura de la estación base.

El icono parpadea cuando el auricular está fuera de cobertura o está buscando una base.

Aparece en modo menú para confirmar su selección.

Indica que están disponibles más opciones.

Use las teclas ARRIB A /ABAJO para desplazarse hacia arriba / hacia abajo.

Aparece cuando está en modo menú. Pulse la tecla ATRAS para volver al nivel de menú anterior.

\* Sujeto a suscripción y disponibilidad de servicio del operador de la línea fija.

#### Las operaciones del teléfono

##### Conexión / desconexión

- Pulse y mantenga pulsada la tecla .

Nota: Cuando el teléfono alámbrico está desconectado no se puede utilizar para hacer llamadas incluyendo llamadas de emergencia. Éste no sonará durante una llamada entrante. Para responder a una llamada tendrá que volver a conectarlo. El auricular inalámbrico puede tardar cierto tiempo en restablecer un enlace de radio con la unidad base.

#### Para bloquear / desbloquear el teclado

- Pulse y mantenga pulsada la tecla .

Nota: Todavía se puede responder a las llamadas entrantes aunque el teclado esté bloqueado.

#### Cambiar el idioma de pantalla

- / ó para seleccionar **AJUSTES PERS** / / ó para seleccionar **IDIOMA** / / ó para seleccionar el idioma que desee / / se reproduce un pitido de confirmación.

Nota: Una vez que se configura el idioma, los menús de opciones del teléfono cambiarán en la pantalla en el idioma seleccionado de forma inmediata.

#### Configurar fecha y hora

Nota: Si está suscrito al servicio de identificación de llamadas, la hora y la fecha se fijarán de forma automática cuando reciba una llamada; aunque todavía puede requerir fijar el año correcto.

- / ó para seleccionar **RELOJ&ALARMA** / / para seleccionar **DIA /HORA** /aparece la última fecha guardada / introduzca la fecha actual (YY- MM - DD) / / posteriormente introduzca la hora (HH-MM) / . ( Desde la base: presione y mantenga presionado / /HH/MM y DD/MM presione brevemente para confirmar)

- / ó para seleccionar **AJUSTES PERS** / / para seleccionar **NOMBRE TELF** / / aparece el nombre actual del auricular / para borrar los caracteres uno a uno / introduzca el Nuevo nombre (máximo 10 caracteres) / / se reproduce un pitido de confirmación.

#### Realizar y recibir llamadas

Realizar una llamada

- antes o después de marcar el número de teléfono:
- Desde la lista de rellamadas: / ó / ó .
- Desde el registro de llamada\*: / ó / ó .

Nota: Es necesario estar suscrito al servicio de identificación de llamadas para poder ver el número de la persona que llama o el nombre en el registro de llamadas.

- Desde la agenda: / / ó .
- Desde las teclas de memorias directas: en modo inactivo, pulse y mantenga pulsado **TECLA 1** ó **TECLA 2** / .

#### Responder y finalizar una llamada

- / .
NOTA IMPORTANTE: Simplemente puede volver a colocar el auricular en la estación base o cargador para finalizar una llamada.

Nota: IMPORTANTE: Simplemente puede volver a colocar el auricular en la estación base o cargador para finalizar una llamada.

#### Uso del manos libres

- Para activar / desactivar el modo manos libres: ó .

#### Ajustar el volumen del micrófono

Durante una llamada pulse ó para seleccionar **VOLUMEN 1** a **VOLUMEN 5** . ( Desde la base: presione / para ajustar el volumen )

#### Silenciar (Mute) / dar volumen al micrófono

- ó para conectar / desconectar el micrófono.

#### Buscar un auricular (función paging)

- Pulse la tecla INT situada en la base alámbrica. Todos los auriculares registrados empiezan a sonar.

- Una vez recuperado, pulse cualquier tecla del auricular para detener el timbre o pulse nuevamente la tecla INT .

#### Llamada en espera

Si está suscrito al servicio de llamada en espera, el micrófono emitirá un pitido para informarle que hay una segunda llamada entrante.

El número o nombre de la segunda persona que llama se muestra en el auricular si está suscrito al servicio de identificación de llamadas.

Por favor, póngase en contacto con su proveedor de red para obtener más información sobre este servicio.

#### Uso de la agenda: 50 entradas en el auricular inalámbrico y 30 entradas en la base alámbrica

#### Guardar un contacto en la agenda

- / ó para seleccionar **AGENDA** / / para introducir una **NUEVA ENTR.** / introduzca el nombre / / introduzca el número / / se reproduce un pitido de confirmación ( para borrar caracteres).

( Desde la base: presione y mantenga presionado / ingrese el número / )

#### Acceder a la agenda

- ó para seleccionar **AGENDA** / / ó para seleccionar **LIST** / .

**Nota:** En vez de pulsar la tecla de Navegación, para buscar las entradas de la agenda, puede pulsar la tecla numérica que corresponde a la primera letra de la entrada que desee localizar. ( Desde la base: pulsar / & )

#### Modificar una entrada de la agenda

- / ó para seleccionar **AGENDA** / / ó para seleccionar **EDIT.** **ENTR** / / ó para seleccionar una entrada / / se muestra el nombre actual / edite el nombre / / / se reproduce un pitido de confirmación.

( Desde la base: presione / ó para seleccionar el número / presione y mantenga presionado / presione para borrar los dígitos / ingrese el nuevo número / )

#### Borrar una entrada de la agenda

- / ó para seleccionar **AGENDA** / / ó para seleccionar **BORRAR** / / ó para seleccionar una entrada a borrar / / / se reproduce un pitido de confirmación.

( Desde la base: presione / ó para seleccionar el número / presione / )

#### Borrar todas las entradas de la lista de la agenda

- / ó para seleccionar **AGENDA** / / ó para seleccionar **BORRAR TODO** / / / se reproduce un pitido de confirmación. ( Desde la base: presione / presione y mantenga / )

#### Añadir / Editar las memorias de acceso directo en el auricular inalámbrico

- / ó para seleccionar **AGENDA** / / ó para seleccionar **MEM. DIRECTA** / / ó para seleccionar **TECLA 1** ó **TECLA 2** / / aparece el nombre guardado y **SIN NÚMERO** si está vacía / si no hay un número guardado en la tecla seleccionada o si desea cambiar el nombre o el número que está guardado, pulse para entrar en el menú de la memoria directa para añadir / editar el nombre o el número / ó para seleccionar **EDITAR NUM** / / la pantalla muestra el nombre guardado actual o **INTRO NOMB** si no hay un nombre guardado, edite o introduzca el nombre que desee / / ..... / / se reproduce un pitido de confirmación.

#### Borrar memorias de acceso directo en el auricular inalámbrico

- / ó para seleccionar **AGENDA** / / ó para seleccionar **MEM. DIRECTA** / / ó para seleccionar **TECLA 1** ó **TECLA 2** / / aparece el nombre guardado (o **SIN NÚMERO** si ya está vacía) / para entrar en el menú de memoria directa / ó para seleccionar **SUPRIMIR** / / / se reproduce un pitido de confirmación.

#### Usar la lista de rellamada

La lista de rellamada guarda los últimos 5 números marcados.

#### Acceso a la lista de rellamada

- / ó para buscar en la lista de rellamada / para ver los detalles de la entrada seleccionada. (Desde la base, pulsar la tecla **REDIAL** para rellamar)

#### Guardar un número marcado en la agenda

- / ó para seleccionar una entrada / para mostrar **GUARDAR NUM.** / para mostrar **INTRO. NOMB.** / introduzca el nombre del contacto (máximo 12 caracteres) / / volver a la pantalla de la lista de rellamada. ( Desde la base: / / presione y mantenga presionado / )

#### Usar el registro de llamadas

#### Acceder al registro de llamadas

- / ó .

#### Guardar la lista de entrada de llamada en la agenda

- / ó para seleccionar una entrada / ó para seleccionar **SAVE NUMBER** / para seleccionar e introducirca el nombre del contacto (máximo 12 caracteres) / .

( Desde la base: / ó / presione y mantenga presionado / )

#### Borrar una entrada del registro de llamadas

- / ó / ó para seleccionar **BORRAR** / / / se reproduce un pitido de confirmación. ( Desde la base: presione / ó para seleccionar el número / presione / )

#### Borrar todas las entradas del registro de llamadas

- / ó para seleccionar **BORRAR TODO** / / / se reproduce un pitido de confirmación.

( Desde la base: presione / presione y mantenga presionado / )

#### Usar el intercomunicador

##### Intercomunicar con otro auricular

- Presione **INT** en la base fija/auricular inalámbrico ( Presione el número del auricular o \* para llamar/timbrar a todos los auriculares )

#### Transferir una llamada externa a otro auricular

Durante la llamada :

- Presione **INT** en la base fija/auricular inalámbrico ( Presione el número del auricular o \* para llamar/timbrar a todos los auriculares )

- Presione en el auricular al que se llama para responder a lallamada interna con el fin de que puedan hablar de forma interna las dos personas que llaman / presione en el primer auricular para transferir la llamada externa al auricular al que se llama / se transfiera la llamada externa. ( Desde la base: presione o levante el auricular para contestar a una llamada interna )

**Nota:** En caso de que no haya respuesta del auricular al que se llama, pulse la tecla **INT** para volver a la llamada externa.

#### Responder a una llamada externa durante una llamada interna

- Presione / para responder a la llamada externa y acabar con la intercomunicación.

Nota: Para poner en espera y responder a la llamada entrante externa pulse la tecla **INT** .

( Desde la base: presione o levante el auricular para contestar a una llamada interna )

#### Cambiar entre una llamada interna y una externa

- Durante la llamada, pulse **INT** en la base fija/auricular inalámbrico.

#### Establecer una llamada de conferencia a tres

- Duran te una llamada, **INT** / introduzca el número del auricular al que desea llamar / en el auricular al que se llama para responder / y mantenga pulsada en el primer auricular para iniciar la conferencia a tres bandas. ( Desde la base: mantenga presionado **INT** para establecer la conferencia )

**La CONFERENCIA** será desplegada en la pantalla del auricular una vez que la llamada de conferencia es establecida.

#### Tono del auricular

#### Fijar el volumen del auricular

Existen 5 opciones de volumen de timbre (DESACTIVADO, NIVEL 1, NIVEL 2, NIVEL 3, NIVEL 4 y NIVEL 5). El nivel configurado de fabricación es el NIVEL 3.

- / ó para seleccionar **AJUSTES PERS** / / ó para seleccionar **TONOS TELF** / para seleccionar y mostrar **VOL.TIMBRE** / / ó para alcanzar el nivel de volumen que desee / / se reproduce un pitido de confirmación.

#### Fijar la melodía auricular: 10 melodias

- / ó para seleccionar **AJUSTES PERS** / / ó para seleccionar **TONOS TELF** / / ó para seleccionar **TONOS TELF** / / ó para fijar la melodía que desee / / se reproduce un pitido de confirmación.

#### Activar / Desactivar el tono del auricular

- / ó para seleccionar **AJUSTES PERS** / / ó para seleccionar **TONOS TELF** / / ó para seleccionar **TONO TECLA** / / ó para seleccionar **ACTIV** ó **DESACTIVADO** / / se reproduce un pitido de confirmación.

#### Activar / desactivar colgar automáticamente

- / ó para seleccionar **AJUSTES PERS** / / ó para seleccionar **COLGARAUTO** / / ó para seleccionar **ACTIV.** ó **DESACTIVADO** / / se reproduce un pitido de confirmación.

#### Fijar el formato de fecha y hora Fijar el formato de hora (sólo auricular inalámbrico)

- / ó para seleccionar **RELOJ&ALARMA** / / ó para seleccionar **AJUST FORM** / / para entrar en **FORMATO HORA** / / se muestra la configuración actual / ó para seleccionar **12 HORAS** ó **24 HORAS** / / se reproduce un pitido de confirmación.

#### Fijar el formato de fecha (sólo auricular inalámbrico)

- / ó para seleccionar **RELOJ&ALARMA** / / ó para seleccionar **AJUST FORM** / / ó para seleccionar **FORMAT FECHA** / / se reproduce un pitido de confirmación / ó para seleccionar **DD/MM** ó **MM/DD** / / se reproduce un pitido de confirmación.

**Configurar la alarma (sólo auricular inalámbrico)**

- / ó para seleccionar **RELOJ&ALARMA** / / ó para seleccionar **ALARMA** / / ó para seleccionar **DESACTIVADO / UNA SOLA VEZ / A DIARIO** / .

- Si ha seleccionado **UNA SOLA VEZ** ó **A DIARIO**, introduzca la hora (**HH-MM**) de la alarma / ó para seleccionar **AM** ó **PM** si la hora está en formato de 12 horas / / se reproduce un pitido de confirmación.

#### Configurar el tono de la alarma

- / ó para seleccionar **RELOJ&ALARMA** / / ó para seleccionar **TONO ALARMA** / / ó para seleccionar **MELODÍA 1**, **MELODÍA 2** ó **MELODÍA 3** / / se reproduce un pitido de confirmación.

#### Uso avanzado de su teléfono Cambio del PIN máster

El PIN máster se usa para el registro y anulación de registro de los auriculares.

El número PIN máster por defecto es 0000.

**Nota:** En caso de que olvide su código PIN, puede reiniciarlo al 0000 (por fabricación) usando un reinicio de teléfono.

- / ó para seleccionar **AJUSTE AVANZ** / / ó para seleccionar **CAMBIAR PIN** / / introduzca el PIN máster actual cuando se le pida / / introduzca el Nuevo PIN / / se reproduc un pitido de confirmación.

#### Registrar el auricular con su base

**IMPORTANTE:** El registro del auricular sólo es necesario cuando adquiere auriculares extras o si el auricular no está registrado. Se pueden registrar hasta 4 auriculares a una estación base. Es necesario el PIN máster antes de que pueda registrar o anular el registro de auriculares. Introduzca el PIN máster cuando se le pida y posteriormente pulse la tecla OK para confirmarlo. Por fabricación, el PIN máster es 0000.

- En la estación